

MARINE RIDE AND HANDLING JACK PLATES




HeySea Jack Plate Standard and Xtreme


EN

HeySea hydraulic jack plates
Short Installation and Operating Manual

1

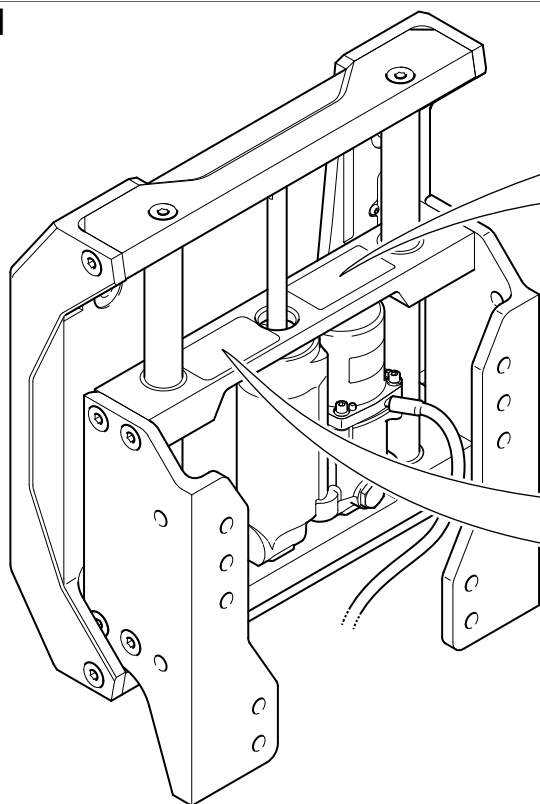

⚠ WARNING

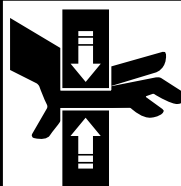

CRUSH HAZARD

Moving jackplate parts can crush. Keep all body parts free and clear.

DW0377



⚠ WARNING Failure to adhere to these warnings may result in severe bodily injury and/or loss of vessel control, leading to possible ejection from vessel causing property damage, personal injury and/or death.

469461

SERIAL NUMBER

JP5060R-000100


PRIOR TO EVERY USE:

1. Verify immediate response when switch is engaged (UP/DOWN).
2. Check for binding, loose, worn, broken or leaking components.
3. Confirm that the engine can be steered lock to lock without interference.


INSTALLATION, USE AND MAINTENANCE:

1. Ensure engine ratings are compatible with jackplate.
2. Interference with any object **MUST** be corrected prior to use (consult installation manual).
3. Maintain system at a min. of twice a year.
4. Refer to your Owner's Manual for important safety information.


2

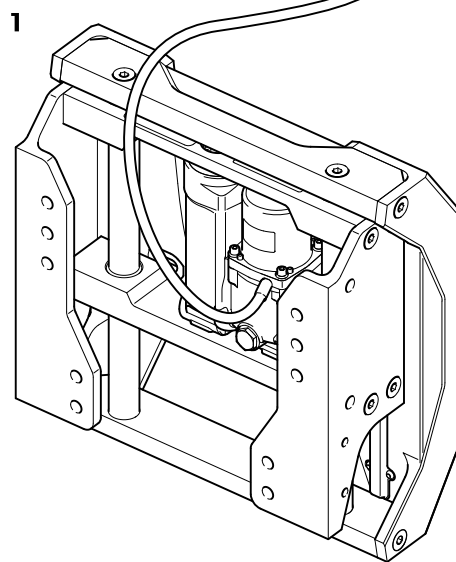


2

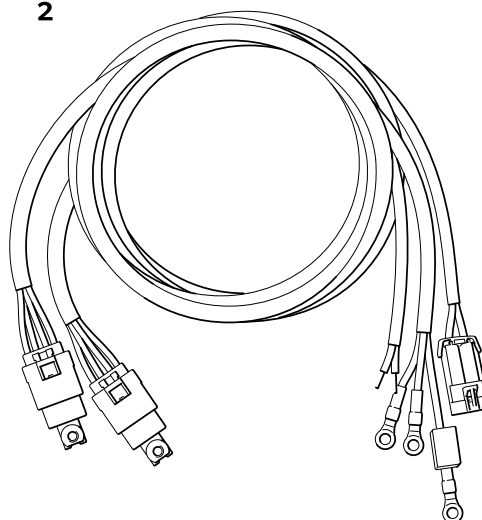



3

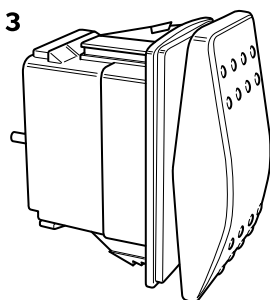



4

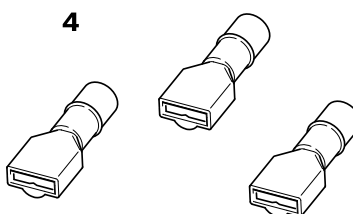


3

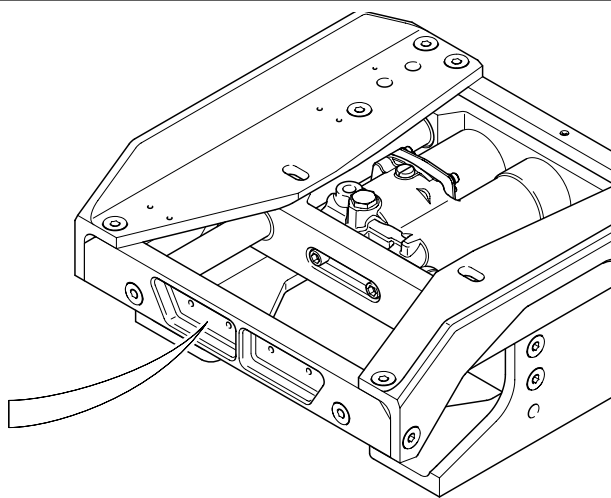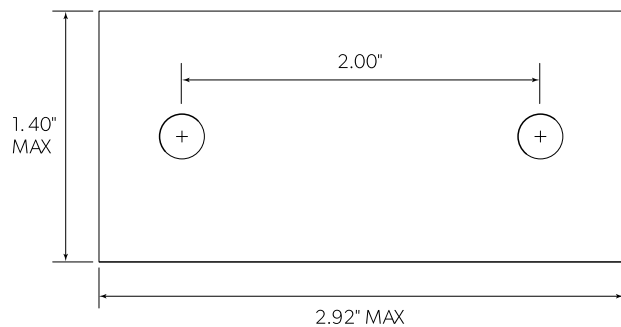


4

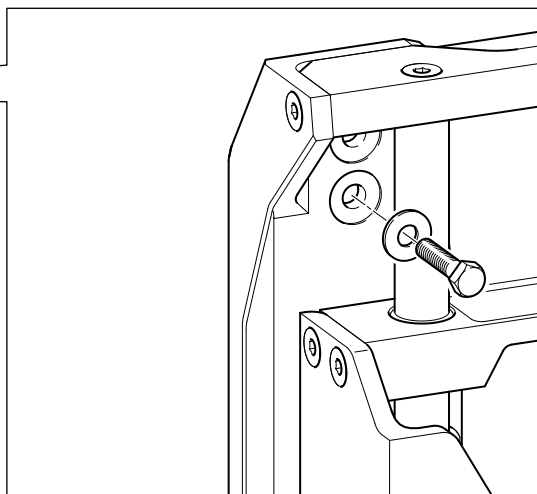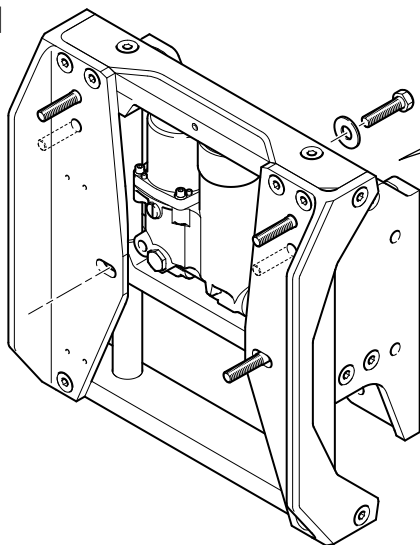


5

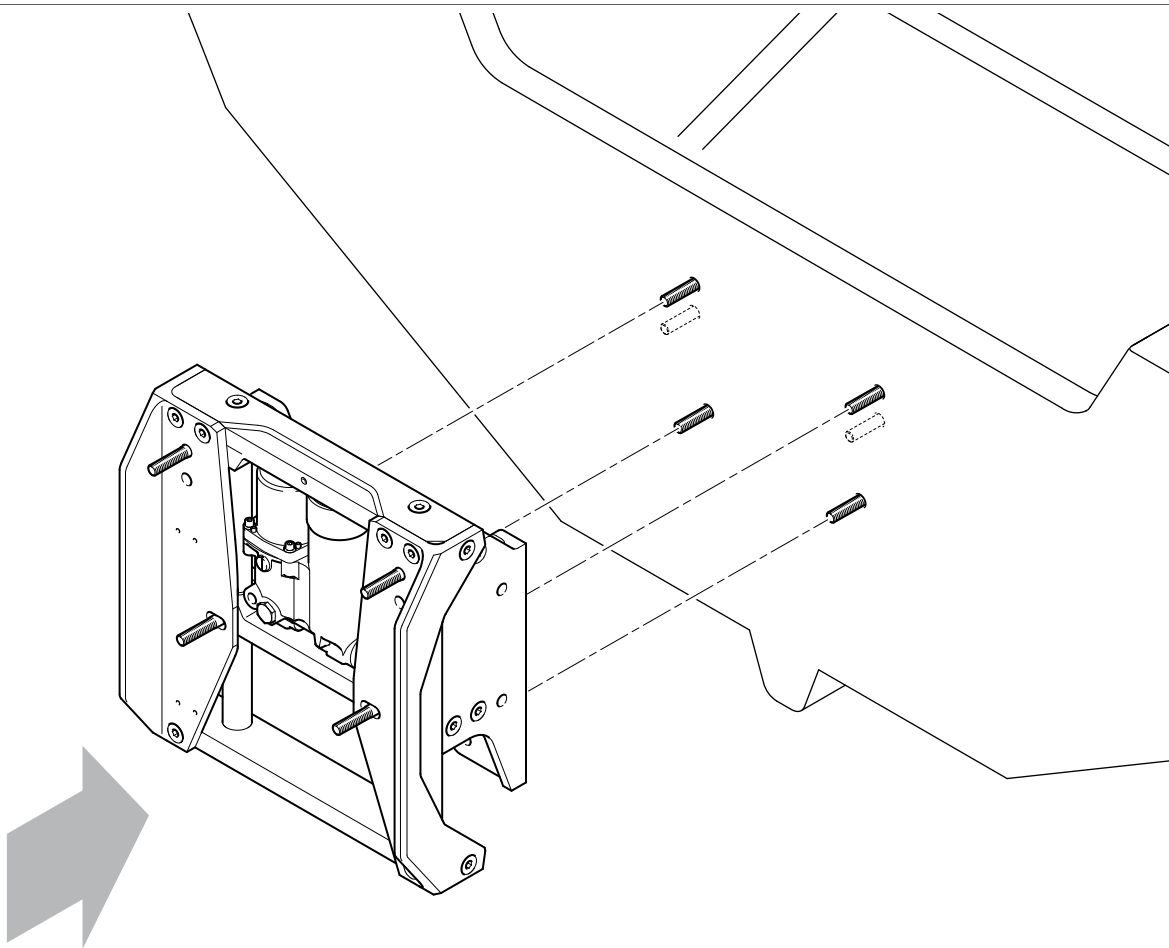


6


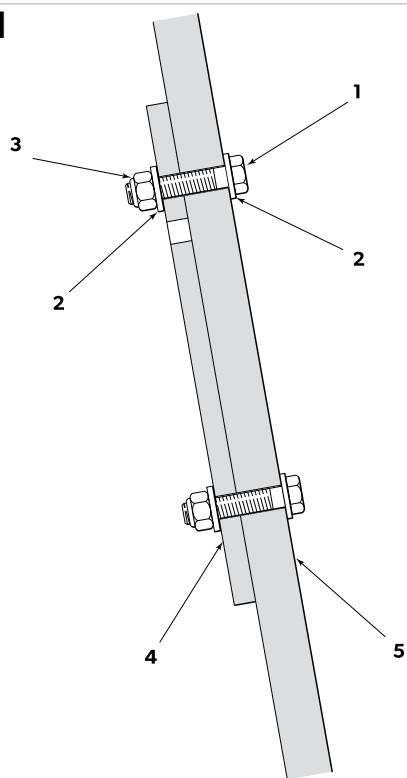


7

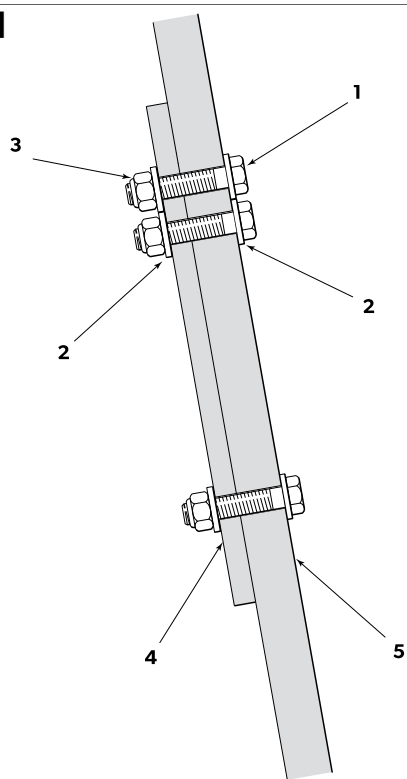


8

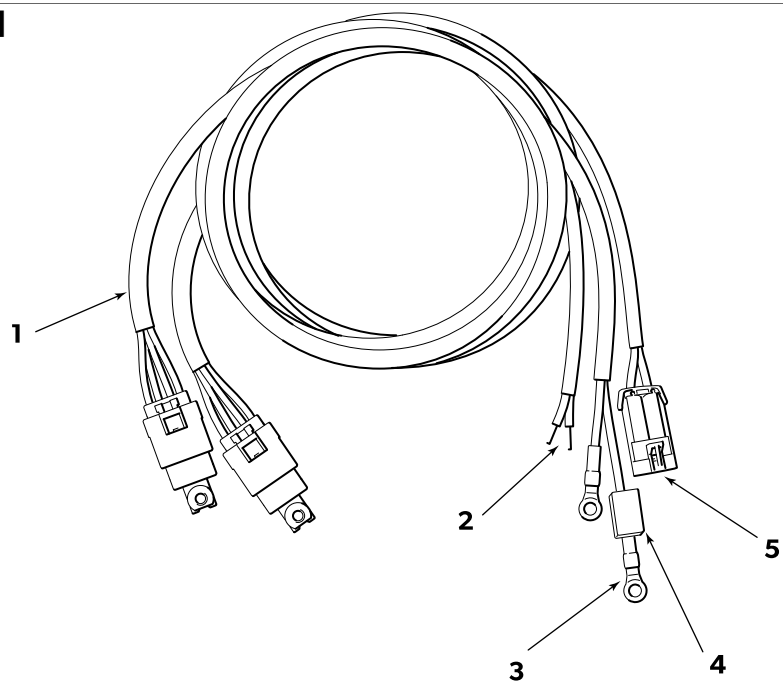


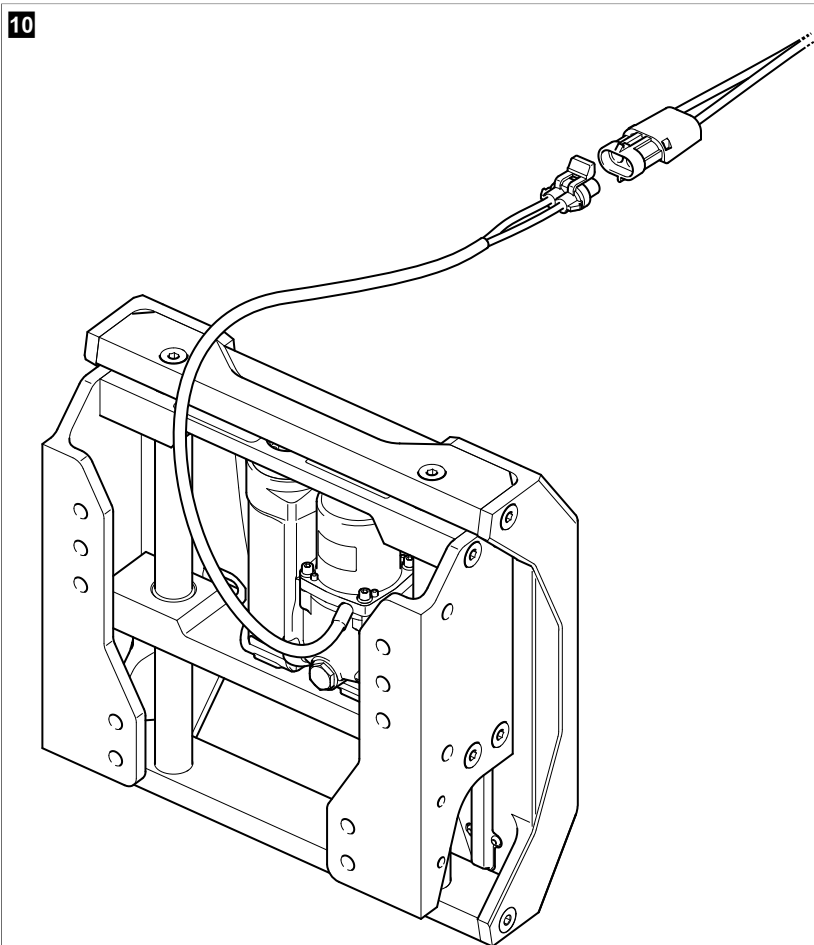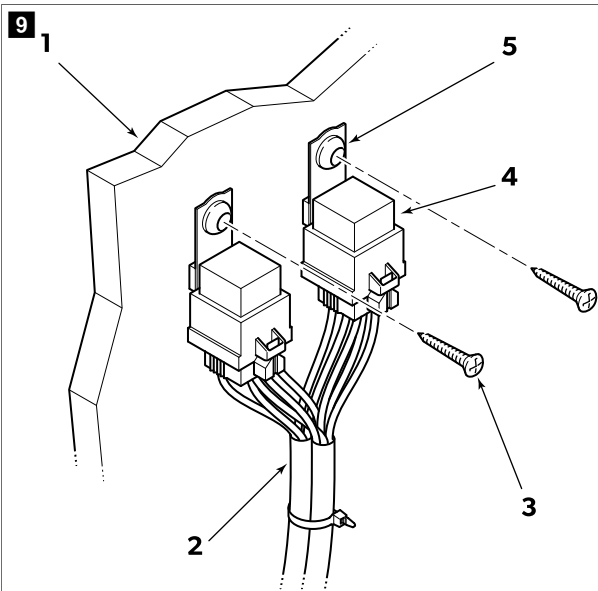


11

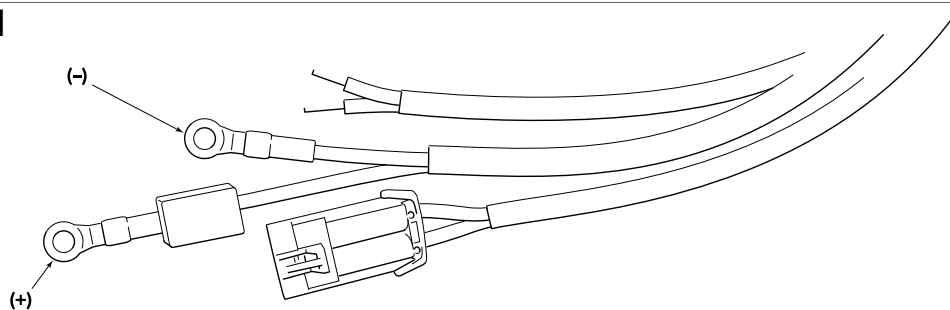


12

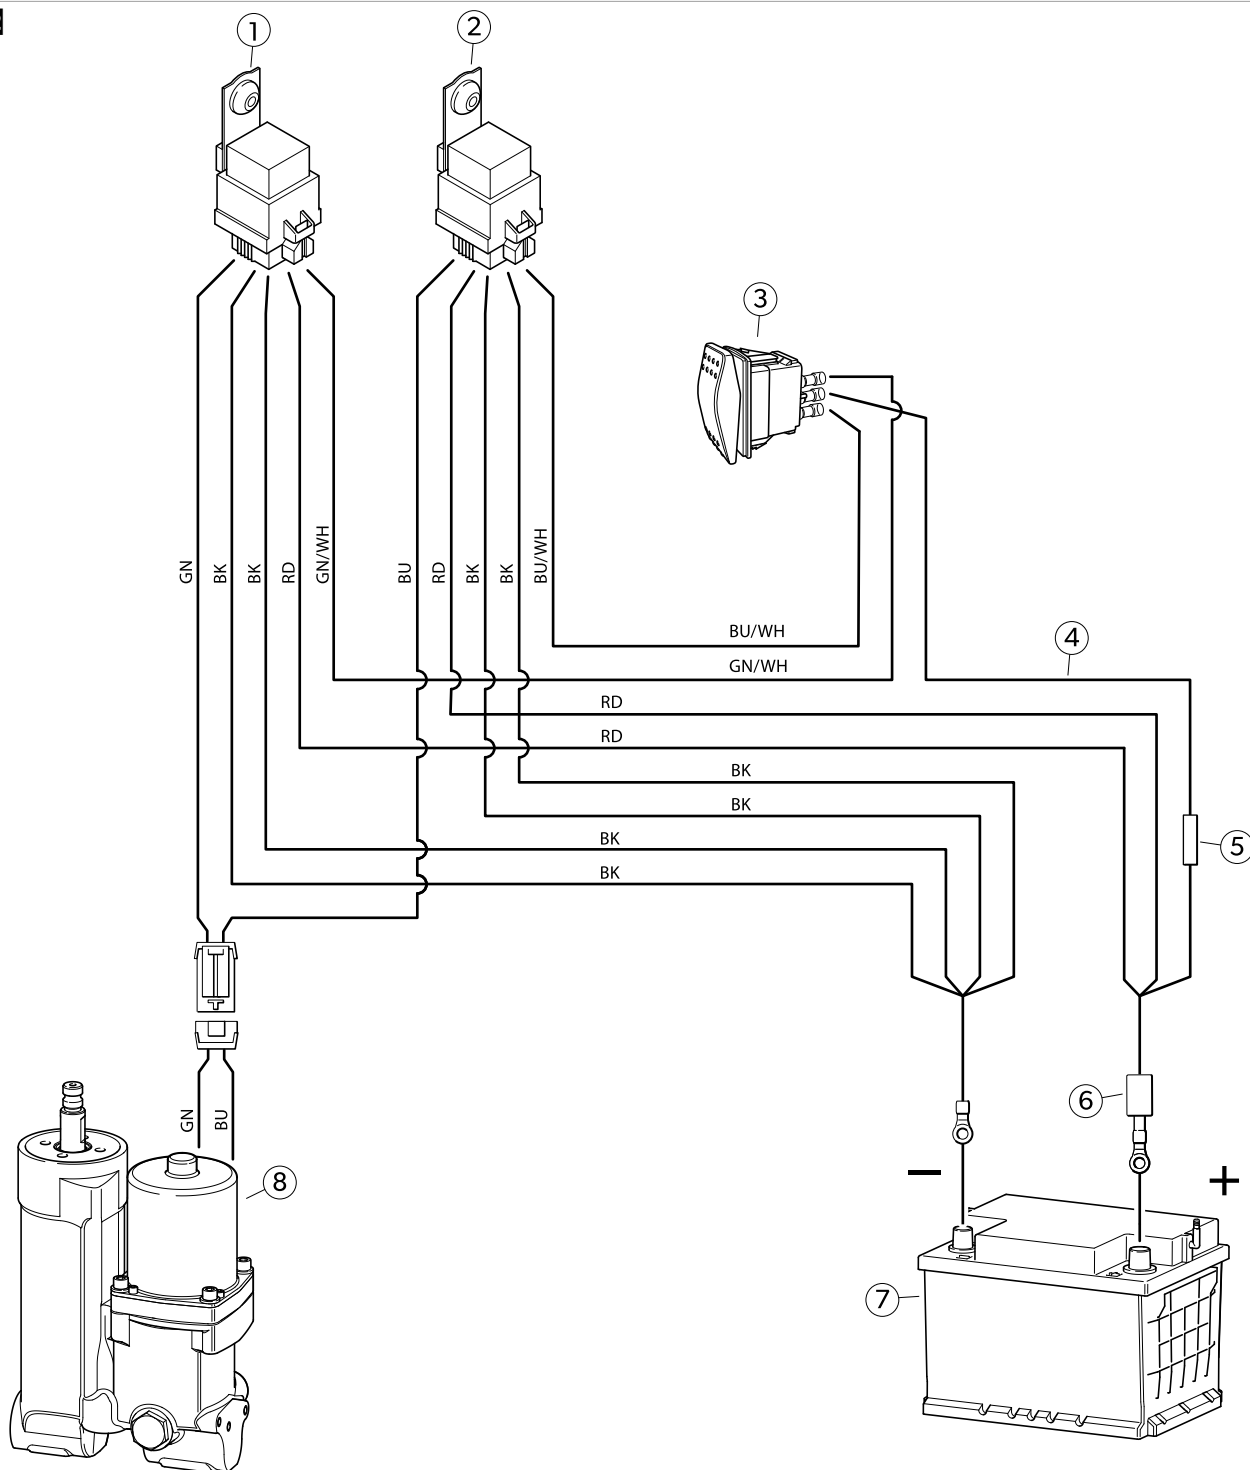


13

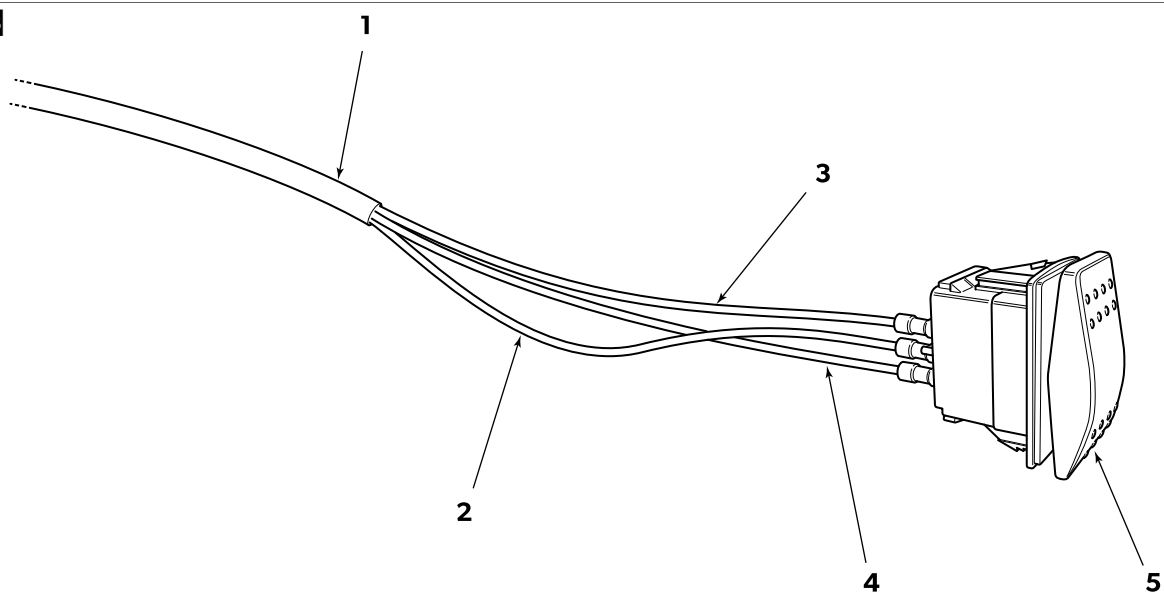

14

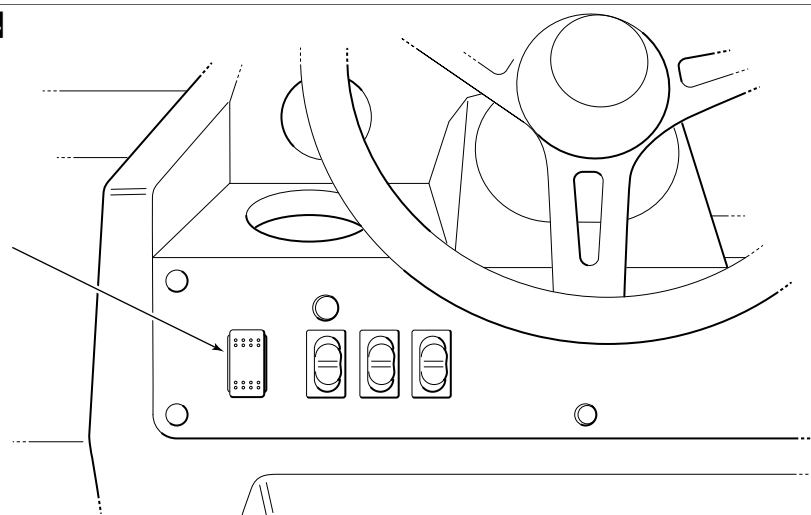

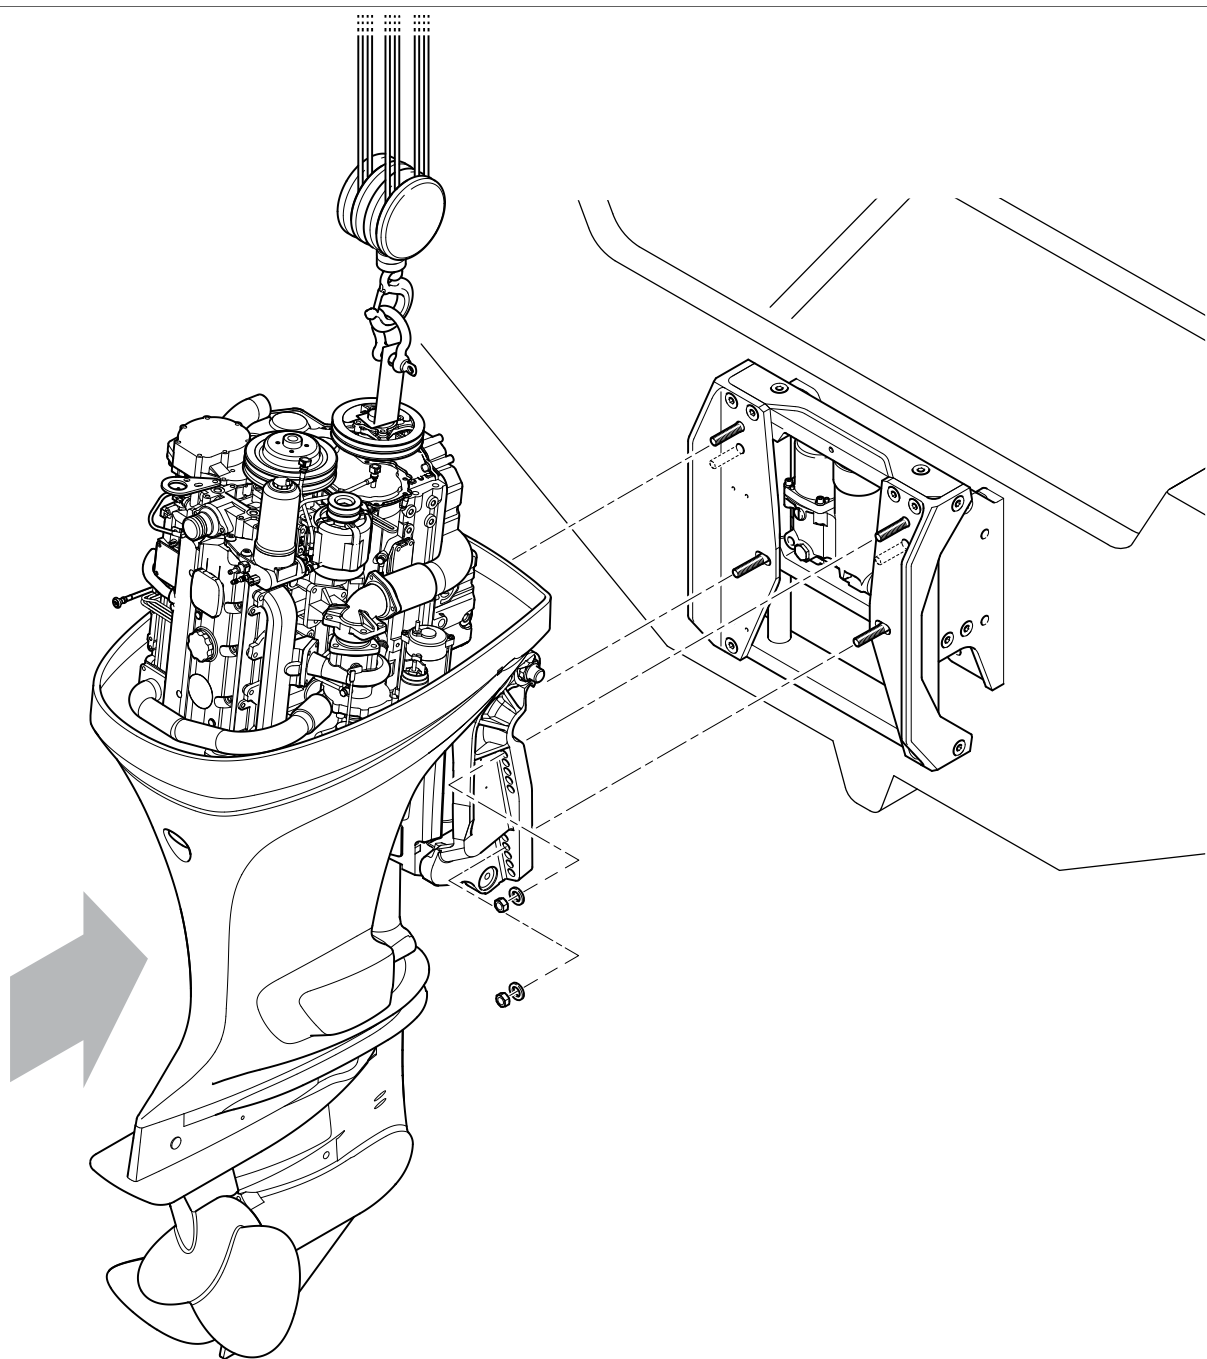

16

