

RBX-B20 Hub Kit

Rubex Interchangeable Hub System Installation Instructions

WARNING:

Always shift engine into the neutral position and turn ingnition off. Remove spark plug leads or ignition coil lead before servicing the propeller.

It is very important to refer to your Engine's Owner Manual for important safety precautions when installing the propeller. Use the original propeller hardware thrust washer, spacer, locking tab, nut, and cotter pin depending on engine/drive manufacturer. This is a Erinrude / Johnson / BRP installation instruction.

- 1) Put the <u>OEM Thrust Washer</u> on propeller shaft just as it came off.
 The taper on the <u>OEM Thrust Washer</u> should mate properly with the taper on the propeller shaft.
- 2) Put the Rubex RBX Hub (#731462020) into the front of the propeller's hub cavity.

 The Rubex RBX Hub (#731462020) should slide ¾ or more into propeller hub cavity or it may be backwards.
- 3) Press or tap gently the Rubex RBX Hub (#731462020) so the propeller hub is flush with the hub cavity.
- 4) Grease the propeller shaft.
- 5) Slide the propeller assembly onto the propeller shaft.
- 6) Install Aft Spacer (#81058220). Consult your engine/drive manual.
- 7) Install the shaft nut. Consult your engine/drive manual for proper torque.
- 8) Install the cotter pin. Consult your engine/drive manual for proper torque.



Picture may not be exact to your application. Please consult your owner's manual.

Aft Spacer (#81058220) included in kit

Cotter Pin (Original Part) not included in kit









RBX Hub (#731462020) <u>included in kit</u>

(Original Part) not included in kit

RUBEX Propeller

RBX-B20 APPLICATIONS:

Evinrude/Johnson/BRP are registered trademarks of the Bombardier Recreational Products Inc.

Evinrude/Johnson/BRP 3" Gearcase (14 Tooth Spline)

15 HP E-TEC H.O. 2011 & Newer, 20 HP 2 Cyl 84-97, 25 HP (Commercial) 93-05, 25 HP 2 & 3 Cyl 84 & Newer, 25 HP E-TEC 2009 & Newer, 30 HP 2 Cyl 84 & Newer, 30 HP E-TEC 2009 & Newer, 35 HP 2 Cyl 79-83, 35 HP 3 Cyl 97-01

